

WOODEN ADIRONDACK FOLDING CHAIR



ASSEMBLY MANUAL

Parts List



Chair assembly

2 armrests

hardware pack

Tools Required For The Job



5/32" Hex Key
(included)



7/16" wrench
(not included)

*NOTE: This Hex Key is used to tighten all the screws used in the assembly process.

Step:1




Place chair in this position on a flat surface.

Step:2



Fasten armrest to chair using bolt provided and by placing a bushing between the point of contact.

Step:3

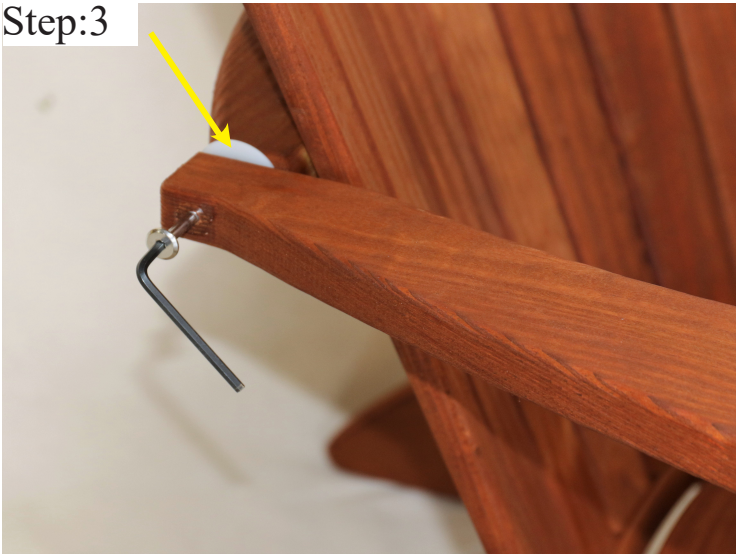

Lift back into upright position, then fasten armrest to back rest using lag provided. Place bushing between armrest and back rest.

Step 4: Repeat step 2 on opposite side.

Step 5: Fasten last armrest to back rest using lag provided.

Step 6: Tighten bolts with hex wrench provided and a 7/16" wrench, not provided.



Your assembly is now complete and your finished product should look like this!